



Various Equipment

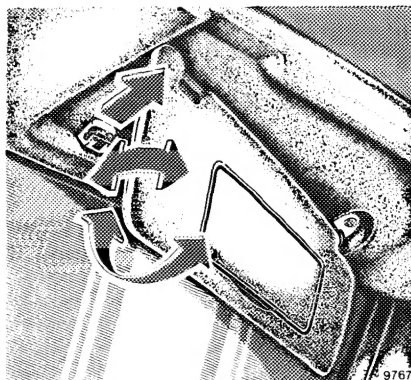

Sun Visors


Swing sun visors down to protect against sun glare.

If sunlight enters through the side window, disengage visor from inner mounting and swing to the side.

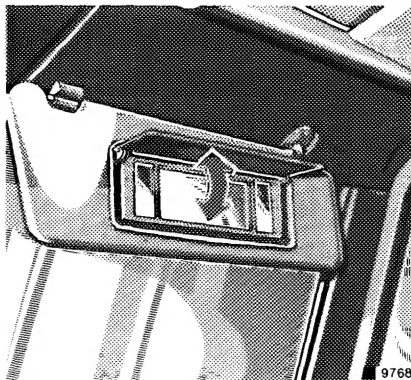

Vanity mirror:

Swing down sun visor. The lamps are switched on when the cover is opened. For this purpose the visor must be engaged in its inner mounting.

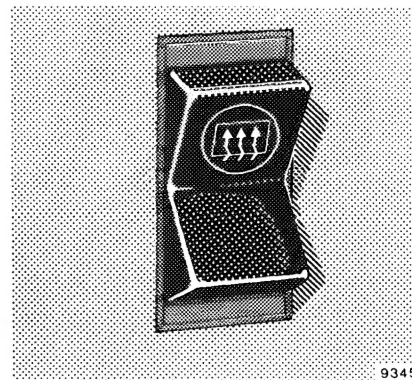

Heated Rear Window

With engine running, press symbol side of rocker switch to turn on, bottom to turn off.

When the rear window heater is turned on, the indicator lamp in the switch comes on.

A heavy load is imposed on the battery due to the high power requirement. For this reason, switch off the heated rear window as soon as it is demisted or defrosted. It is shut off automatically after a maximum of 20 minutes. Remove snow or ice from window before starting to drive.